



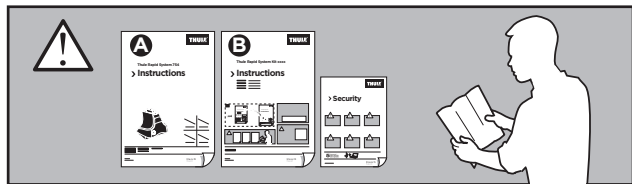

Thule Rapid System Kit 1759

> Instructions

FORD Kuga, 5-dr SUV, 13-

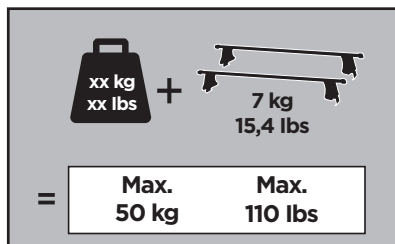

ISO 11154-E


141759

C.20140318
519-1759-01


Bring your life
thule.com




265 x2



326 x1



327 x1



1113 x2



1170 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
FORD Kuga, 5-dr SUV, 13-	46	1111	43 3/4

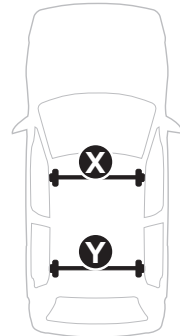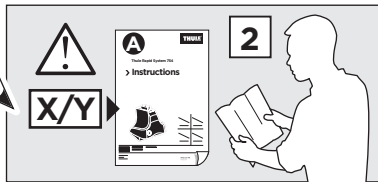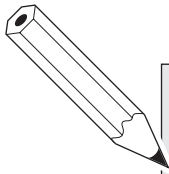


	Y (scale)	Y (mm)	Y (inch)
FORD Kuga, 5-dr SUV, 13-	39,5	1046	41 1/8

2

FORD Kuga, 5-dr SUV, 13-

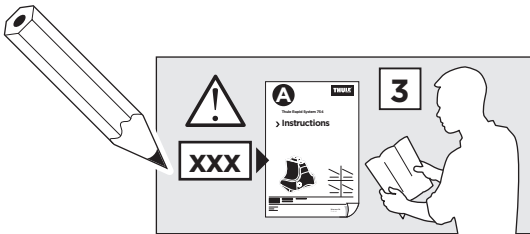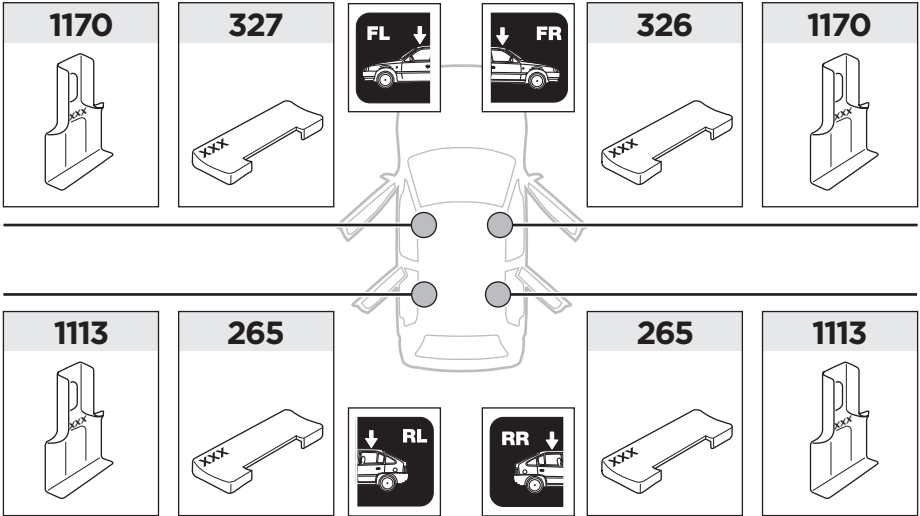

3

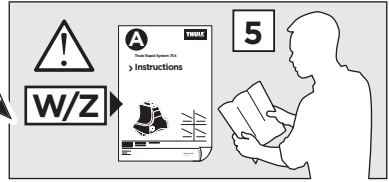

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Kuga, 5-dr SUV, 13-	300	700	11 3/4	27 1/2

